



HOW TO COMPLETE THE AUTOMATIC WASHING CYCLE

APPIA LIFE 2-3 GR VERSION


1 - PRESS AND HOLD THE HOT TAP BUTTON FOR APPROX. 3 SECONDS

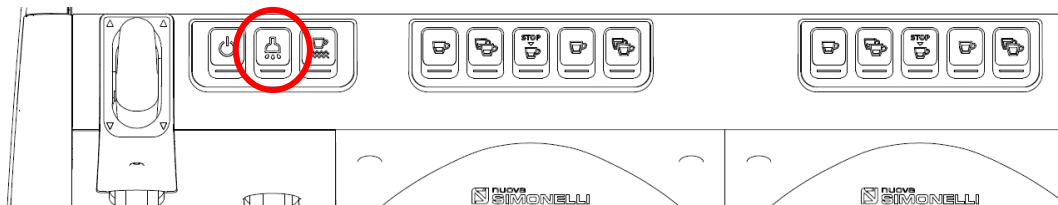


2 - THE CONTINUOUS POUR BUTTON OF EACH GROUP WILL BEGIN TO BLINK

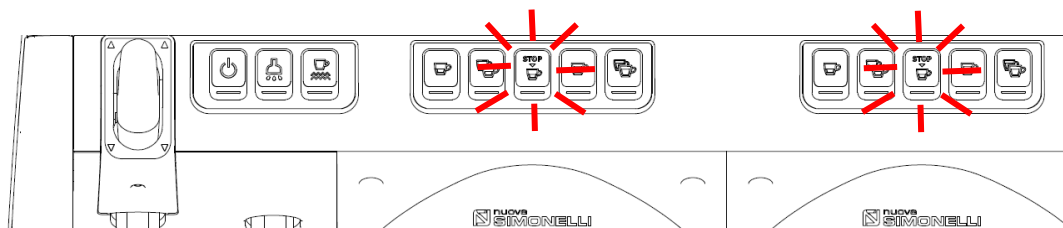


3 - PRESS AND RELEASE EACH CONTINUOUS POUR BUTTON TO START THE WASH CYCLE

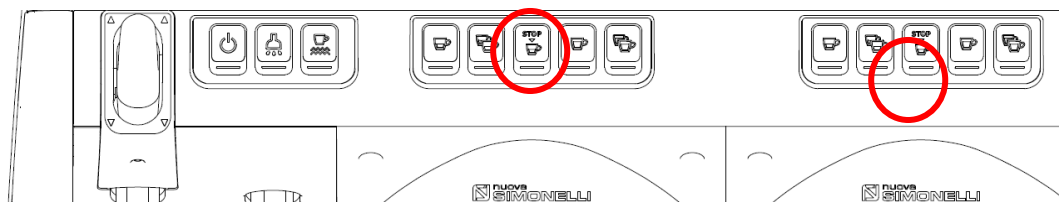


4 - WHEN THE WASH CYCLE IS COMPLETE, EACH CONTINUOUS POUR BUTTON WILL BEGIN TO BLINK AGAIN. REMOVE EACH PORTAFILTER AND WIPE AWAY ANY RESIDUAL DETERGENT, THEN REENGAGE THE PORTAFILTERS

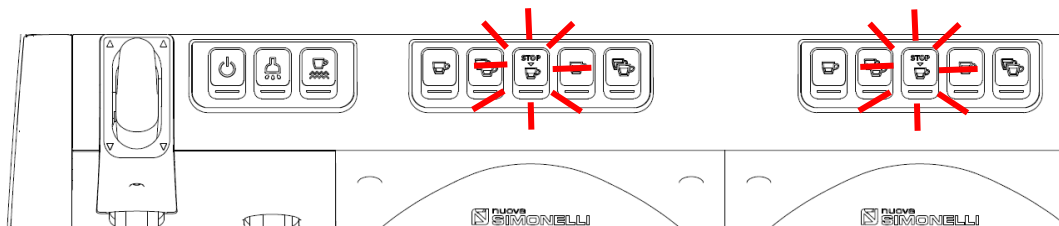


5 - PRESS AND RELEASE EACH CONTINUOUS POUR BUTTON TO START THE RINSE CYCLE

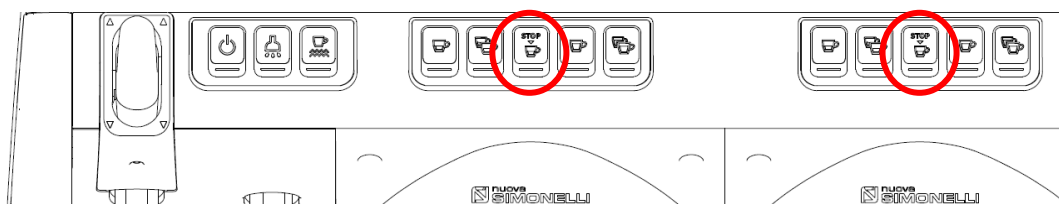

A - AFTER 20 SECONDS FROM THE ACCESS, IF NO BUTTONS ARE PRESSED, THE MACHINE GOES BACK TO THE NORMAL OPERATION

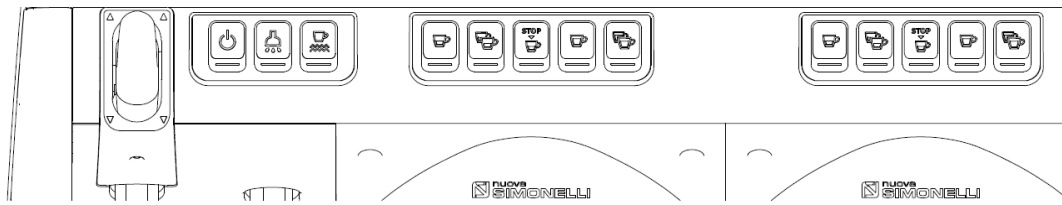


B - WHILE THE CONTINUOUS POUR BUTTONS ARE BLINKING, PRESS AND HOLD THE HOT TAP BUTTON TO RETURN TO NORMAL OPERATION

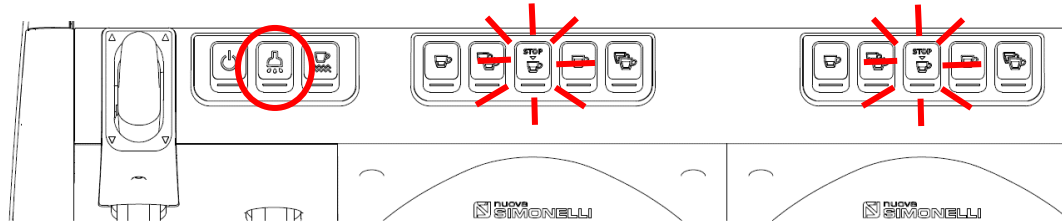


APPIA LIFE 2-3 GR XT VERSION


1 - ACCESS THE AUTOMATIC WASHING CYCLE THROUGH THE DISPLAY

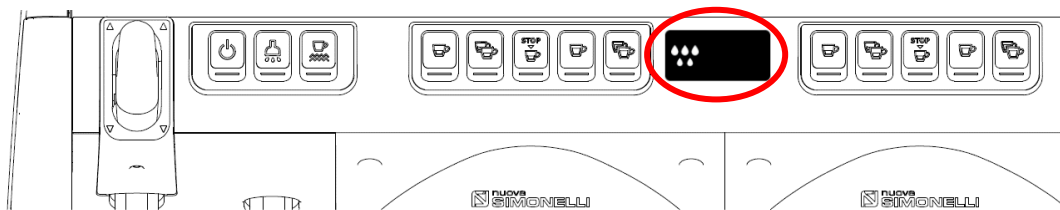


2 - THE CONTINUOUS POUR BUTTON OF EACH GROUP WILL BEGIN TO BLINK

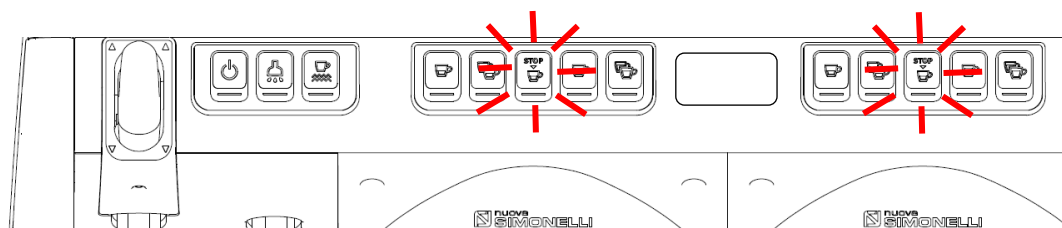

3 - PRESS AND RELEASE EACH CONTINUOUS POUR BUTTON TO START THE WASH CYCLE

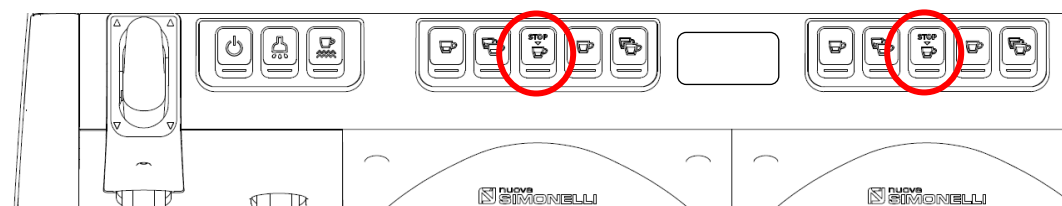

4 - WHEN THE WASH CYCLE IS COMPLETE, EACH CONTINUOUS POUR BUTTON WILL BEGIN TO BLINK AGAIN. REMOVE EACH PORTAFILTER AND WIPE AWAY ANY RESIDUAL DETERGENT, THEN REENGAGE THE PORTAFILTERS

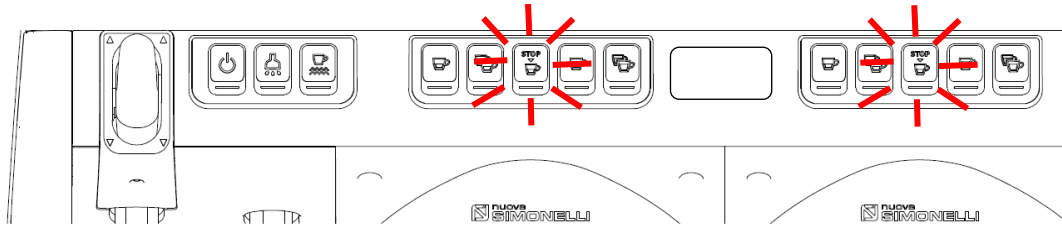

5 - PRESS AND RELEASE EACH CONTINUOUS POUR BUTTON TO START THE RINSE CYCLE

